

UNCLASSIFIED

AD NUMBER

ADB113399

LIMITATION CHANGES

TO:

Approved for public release; distribution is unlimited.

FROM:

Distribution authorized to U.S. Gov't. agencies only; Test and Evaluation; JUN 1987. Other requests shall be referred to Army Chemical Research Development and Engineering Center, ATTN: SMCCR-SPS-T, Aberdeen Proving Ground, MD 21010-5423.

AUTHORITY

ECBC memo dtd 14 Oct 2014

THIS PAGE IS UNCLASSIFIED

**CHEMICAL
RESEARCH,
DEVELOPMENT &
ENGINEERING
CENTER**


CRDEC-TR-87054

AD-B113 399

**PRODUCT IMPROVEMENT PROGRAM
TO INCREASE THE NERVE AGENT
SENSITIVITY OF THE M256 CHEMICAL
AGENT DETECTOR KIT**

**by Robert Eckhaus
DETECTION DIRECTORATE**

June 1987

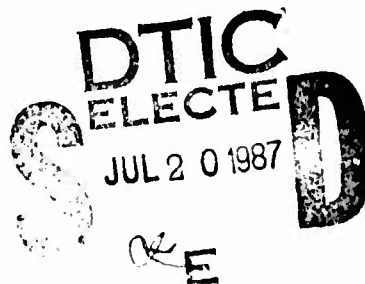

**U.S. ARMY
ARMAMENT
MUNITIONS
CHEMICAL COMMAND**



Disclaimer

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorizing documents.

Dest,uction Notice

For classified documents, follow the procedures in DoD 5200.22-M, Industrial Security Manual, Section II-19, or DoD 5200.1-R, Information Security Program Regulation, Chapter IX. For unclassified, limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

Distribution Statement

Distribution authorized to U.S. Government agencies only because of test and evaluation; June 1987. Other requests for this document shall be referred to Commander, U.S. Army Chemical Research, Development and Engineering Center, ATTN: SMCCR-SPS-T, Aberdeen Proving Ground, Maryland 21010-5423.

UNCLASSIFIED
SECURITY CLASSIFICATION OF THIS PAGE

REPORT DOCUMENTATION PAGE

1a. REPORT SECURITY CLASSIFICATION UNCLASSIFIED			1b. RESTRICTIVE MARKINGS AD-B113399		
2a. SECURITY CLASSIFICATION AUTHORITY			3. DISTRIBUTION / AVAILABILITY OF REPORT Distribution authorized to U.S. Government agencies only because of test and evaluation: (Continued on reverse)		
2b. DECLASSIFICATION / DOWNGRADING SCHEDULE			5. MONITORING ORGANIZATION REPORT NUMBER(S)		
4. PERFORMING ORGANIZATION REPORT NUMBER(S) CRDEC-TR-87054					
6a. NAME OF PERFORMING ORGANIZATION CRDEC		6b. OFFICE SYMBOL (if applicable) SMCCR-DDP		7a. NAME OF MONITORING ORGANIZATION	
6c. ADDRESS (City, State, and ZIP Code) Aberdeen Proving Ground, MD 21010-5423		7b. ADDRESS (City, State, and ZIP Code)			
8a. NAME OF FUNDING / SPONSORING ORGANIZATION CRDEC		8b. OFFICE SYMBOL (if applicable) SMCCR-DDP		9. PROCUREMENT INSTRUMENT IDENTIFICATION NUMBER PIP No. DA-1-81-08-3021	
8c. ADDRESS (City, State, and ZIP Code) Aberdeen Proving Ground, MD 21010-5423		10. SOURCE OF FUNDING NUMBERS			
		PROGRAM ELEMENT NO.		PROJECT NO.	TASK NO.
					WORK UNIT ACCESSION NO.
11. TITLE (Include Security Classification) Product Improvement Program to Increase the Nerve Agent Sensitivity of the M256 Chemical Agent Detector Kit					
12. PERSONAL AUTHOR(S) Eckhaus, Robert					
13a. TYPE OF REPORT Technical		13b. TIME COVERED FROM 81 May TO 84 Jun		14. DATE OF REPORT (Year, Month, Day) 1987 June	
				15. PAGE COUNT 33	
16. SUPPLEMENTARY NOTATION					
17. COSATI CODES			18. SUBJECT TERMS (Continue on reverse if necessary and identify by block number)		
FIELD	GROUP	SUB-GROUP	M256 Chemical Agent Detector Kit		
15	06	03	Eel acetylcholinesterase		
			Detection Indoxyl acetate (Continued on reverse)		
19. ABSTRACT (Continue on reverse if necessary and identify by block number) The M256 Chemical Agent Detector Kit detects the presence or absence of nerve, blood, and blister agents in the atmosphere. The kit detects agents at levels where the soldier can safely unmask after a chemical attack. New requirements, however, have been established to detect levels of nerve agent that are below the capability of the M256 kit. Development efforts showed that these lower levels could be detected by replacing the horse enzyme in the M256 kit with the eel enzyme. The tests conducted with the product-improved M256E1 kit using eel enzyme as a component of the nerve agent detection system are described in this report. The tests showed that the nerve agent sensitivity levels could be lowered to 0.02 mg/cu m for VX and 0.005 mg/cu m for GB. <i>Keywords;</i>					
20. DISTRIBUTION / AVAILABILITY OF ABSTRACT <input type="checkbox"/> UNCLASSIFIED/UNLIMITED <input type="checkbox"/> SAME AS RPT. <input checked="" type="checkbox"/> DTIC USERS			21. ABSTRACT SECURITY CLASSIFICATION UNCLASSIFIED		
22a. NAME OF RESPONSIBLE INDIVIDUAL TIMOTHY E. HAMPTON			22b. TELEPHONE (Include Area Code) (301) 671-2914		22c. OFFICE SYMBOL SMCCR-SPS-T

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE

3. DISTRIBUTION/AVAILABILITY OF REPORT (Continued)

June 1987. Other requests for this document shall be referred to Commander, U.S. Army Chemical Research, Development and Engineering Center, ATTN: SMCCR-SPS-T, Aberdeen Proving Ground, Maryland 21010-5423.

18. SUBJECT TERMS (Continued)

✓ Nerve agent;
Sensitivity.
Enzyme

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE

PREFACE

The work described in this report was authorized under Product Improvement Program Number DA-1-81-08-3021. This work was started in May 1981 and completed in June 1984.

The use of trade names or manufacturers' names in this report does not constitute an official endorsement of any commercial products. This report may not be cited for purposes of advertisement.

Reproduction of this document in whole or in part is prohibited except with permission of the Commander, U.S. Army Chemical Research, Development and Engineering Center, ATTN: SMCCR-SPS-T, Aberdeen Proving Ground, Maryland 21010-5423. However, the Defense Technical Information Center is authorized to reproduce the document for U.S. Government purposes.

This report has not been approved for release to the public.

✓

B3



Blank

CONTENTS

	Page
1. INTRODUCTION	7
2. NERVE AGENT DETECTION USING THE M256 KIT	7
3. TEST PROGRAM	8
3.1 Purpose	8
3.2 Test Plan	8
3.3 Test Criteria	9
3.3.1 Eel Enzyme Content	9
3.3.2 Reliability	9
3.4 Schedule	9
3.5 PIP Verification Test I (PVT I)	9
3.5.1 Selection of Manufacturers	9
3.5.2 Results of PVT I	10
3.5.2.1 Accelerated Aging Test	10
3.5.2.2 Agent Sensitivity Tests	10
3.5.2.3 Blank Response Tests	10
3.5.2.4 Cyclic Storage Tests	11
3.5.2.5 Interference Tests	11
3.5.3 Conclusions from PVT I	11
3.6 PIP Verification Test II (PVT II)	12
3.6.1 Discussion	12
3.6.2 Results of PVT II Phase I	12
3.6.3 Results of PVT II Phase II	13
3.7 PIP Verification Test III (PVT III)	13
3.7.1 Discussion	13
3.7.2 Results of PVT III	13
4. CONCLUSIONS AND RECOMMENDATIONS	13
4.1 Design and Operation	13
4.2 Processing	14
LITERATURE CITED	15
APPENDIX - TABLES	17
DISTRIBUTION LIST	29

Blank

PRODUCT IMPROVEMENT PROGRAM TO INCREASE THE NERVE AGENT SENSITIVITY
OF THE M256 CHEMICAL AGENT DETECTOR KIT

1. INTRODUCTION

In 1973, the Department of the Army established the requirement for the M256 Chemical Agent Detector Kit [Material Need (Engineering Development) for a Chemical Agent Detector Kit].¹ The M256 kit was adopted into the U.S. Army inventory in 1977 and was approved for full release to the field in 1978. The kit contains 12 sampler-detectors used to detect and classify chemical agents that are present in the air. Each sampler-detector responds to the following agent concentration levels:

Agent	Detectable Concentration (mg/cu m)
Nerve - GB	0.05
VX	0.10
Mustard	2.5
Phosgene oxime	5.0
Hydrogen cyanid	9.0
Cyanogen chloride	10.0
Lewisite	12.0

These detection levels were established to allow the soldier to safely unmask after a chemical attack. New requirements, however, have been established to detect nerve agents at the levels where miosis, the first sign of nerve agent poisoning, occurs. These levels are between 0.005 mg/cu m and 0.001 mg/cu m for both GB and VX.

The current M256 kit uses horse serum cholinesterase (horse enzyme) for the nerve agent test. Due to limitations in sensitivity of the horse enzymes, the M256 kit cannot detect the new lower levels required. A recent study showed that electric eel acetylcholinesterase (eel enzyme) is 10 times as sensitive to both GB and VX as the horse enzyme.² This work proved that the increased sensitivity levels could be met with the eel enzyme. This product improvement program (PIP) was established to prove that this capability could be added to the M256 kit and meet all the requirements of the kit.

2. NERVE AGENT DETECTION USING THE M256 KIT

The portion of the M256 sampler-detector used for nerve agent detection consists of a filter paper disc impregnated with horse enzyme (enzyme disc) and two glass ampoules, one containing a buffer solution (buffer solution ampoule) and the other containing a solution of 2, 6 dichloroindophenylacetate in ligroin (substrate solution ampoule) (See Table A-1). To conduct the test, the ampoule of buffer solution is broken to wet the enzyme disc. The sampler-detector is then exposed to the atmosphere. After 10 minutes, the ampoule of substrate solution is broken and added. If nerve agent is present, the enzyme is inhibited so no reaction occurs, and the enzyme disc will remain white (or peach color due to the

natural color of the substrate solution). If no agent is present, the enzyme promotes the hydrolysis of the substrate, and the enzyme disc turns blue.

The improved M256 sampler-detector (M256E1) is operated in the same manner as the M256 kit. The only difference is that the enzyme disc is an ion exchange paper impregnated with an eel enzyme solution and the ampoule of substrate solution contains indoxyl acetate, which is a clear solution (see Table A-1). Except that the lower levels of agent can be detected with the improved enzyme disc, it responds in the same way as the original. No color indicates agent is present, and a blue-green color indicates that no agent is present.

3. TEST PROGRAM

3.1 Purpose.

The purpose of this test was to:

- Prove that the M256E1 will provide the increased sensitivity to nerve agent needed in the M256 kit.
- Ensure that the M256E1 meets all the requirements of the Material Need (Engineering Development) for the M256 kit.
- Determine if there is a difference in performance of the nerve test due to either the source of eel enzyme or the manufacturer of the sampler-detector.

3.2 Test Plan.

The M256E1 sampler-detectors were subjected to:

- Accelerated Aging Test to verify that the kit has a 5-year shelf life and to determine how to simulate the shelf life using an accelerated storage test.
- Sensitivity Test to verify that the enzyme disc will respond properly to 0.005 mg/cu m of GB and VX when tested in each climate type listed in Table A-2.
- Blank Response Test to verify that the enzyme disc will respond properly when functioned in the absence of agent in each climate type listed in Table A-2.
- Cyclic Storage Test to verify that the enzyme disc will respond properly when functioned in the absence of agent at 33 °F after being subjected to the cyclic storage tests shown in Table A-3.
- Interference Test to determine if the enzyme disc will respond properly when functioned in the absence of agent, but in the presence of the field interferences listed in Table A-4.

3.3 Test Criteria.

3.3.1 Eel Enzyme Content.

The amount of eel enzyme on the disc is critical. If too little enzyme is present, insufficient color will develop in the absence of agent and create a false positive test. If too much enzyme is present, there will not be enough agent at the concentration levels of interest to inhibit all the enzyme, and color will appear, producing a false negative test. Since the eel enzyme degrades with time, it is more likely for a fresh enzyme disc to give a false negative response and an aged enzyme disc to give a false positive test. Therefore, agent tests were conducted with fresh sampler-detectors (maximum enzyme concentration), and blank and interference tests were conducted with aged sampler-detectors (minimum enzyme concentration). The sampler-detectors were aged according to the results of the accelerated storage tests to simulate a 5-year shelf life.

3.3.2 Reliability.

The M256E1 kit must demonstrate a reliability of 92.5% with 90% confidence levels for each test. Each sampler-detector was operated according to the procedures described in the Operator's Manual³ except that only the nerve test was functioned. In addition, the color development time (response time) was increased from 2 to 3 minutes for temperatures above 50 °F (10 °C), due to the inherently slower rate of chemical reaction of the revised reagents on the improved disc. The reliability requirement was met when the number of failures observed during a test was less than or equal to the "Accept" criteria listed for the corresponding sample size, as shown in Table A-5.⁴

3.4 Schedule.

The test program was conducted in three separate verification tests:

- PIP Verification Test I was conducted from March to December 1982.
- PIP Verification Test II was divided into two phases; Phase I took place from March to May 1983 and Phase II from October to December 1983.
- PIP Verification Test III was performed from April to June 1984.

3.5 PIP Verification Test I (PVT I).

3.5.1 Selection of Manufacturers.

The two contractors who were producing the M256 kit, Chemical Compounding Corporation (CCC) and Bendix Corporation, were selected to produce the M256E1 sampler-detectors. Since each manufacturer was required to use eel enzyme from two suppliers (Sigma Chemical Company and Worthington Biochemical Company), four types of sampler-detectors were tested:

- Bendix/Sigma - Bendix-manufactured using Sigma eel enzyme
- Bendix/Worthington - Bendix-manufactured using Worthington eel enzyme
- CCC/Sigma - CCC-manufactured using Sigma eel enzyme
- CCC/Worthington - CCC-manufactured using Worthington eel enzyme.

In addition, the sampler-detectors manufactured for this test contained an ampoule of wetting solution (0.51 ml of 0.03% Triton X-100 surfactant in water) as a replacement for the ampoule of buffer solution. Since the eel enzyme disc already contained the necessary buffers, the development effort showed that only a wetting solution was needed for the nerve agent test.²

3.5.2 Results of PVT I.

3.5.2.1 Accelerated Aging Test.

The results of the accelerated aging tests showed that the enzyme disc from each type of sampler-detector has a shelf life of at least 5 years.⁴ To simulate a 5-year shelf life, it was necessary to age the Bendix sampler-detectors for 24 hours at 194 °F (90 °C) and to age the CCC sampler-detectors for 35 minutes at 90 °C.* The results of the enzyme assay (Table A-6) showed that the fresh Bendix enzyme discs contained 1.3 units of enzyme, and aged discs contained 0.8 to 0.9 units of enzyme. The fresh CCC enzyme discs contained 1.1 to 1.8 units of enzyme, and the aged discs contained 1.0 to 1.1 units of enzyme.

3.5.2.2 Agent Sensitivity Tests.

The results of the GB and VX tests conducted with the fresh sampler-detectors are shown in Tables A-7 and A-8, respectively. In both sets of tests, the agent concentration level was approximately 0.005 mg/cu m. Only a few isolated false-negative responses occurred. None of the incorrect responses could be attributed to the simulated climatic conditions in which the sampler-detectors were exposed and operated. Despite the few incorrect responses, each type met the accept criteria of Table A-5 for all climatic conditions and, therefore, exhibited a reliability at or above the required 92.5%.

3.5.2.3 Blank Response Tests.

The results of tests conducted on the aged sampler-detectors in the absence of agent are shown in Table A-9. Except for those exposed and operated at +33 °F (0.6 °C), the sampler-detectors met the reliability requirements for each climate type. The time for color development was in

* These aging conditions were based on preliminary results. By the time PVT I was completed, the accelerated aging test was concluded. The results showed that it was necessary to age all types of sampler-detectors for 24 hours at 90 °C to simulate a 5-year shelf line.

excess of the 5 minutes allowed by the operating instructions for each of the four types of M256E1 sampler-detectors. Those sampler-detectors that were exposed at +33 °F (0.6 °C), but warmed to 50 °F while waiting for color development, gave the proper negative responses. Since operating procedures direct the user to warm the sampler-detector before the substrate solution ampoule is broken when used at temperatures below +32 °F (0 °C), the false-positive problems that occurred at the aqueous limit (33 °F) did not occur during the Basic Cold Test (-33 °F).

3.5.2.4 Cyclic Storage Tests.

Following the 9-week storage period (Table A-3), the test items were functioned as blanks. Half of the sampler-detectors were operated at 33 °F and the remaining half at ambient (70 °F) temperatures (Table A-10). The items that were functioned at +33 °F (0.6 °C) produced false-positive responses. Those functioned at ambient temperature performed satisfactorily except for the CCC/Sigma sampler-detectors. There is no apparent explanation for the poor performance of these items after cyclic storage.

The wetting solution ampoules of several sampler-detectors were found cracked after hot-cold cyclic storage. Due to the loss of the wetting solution, those sampler-detectors were unsuitable for use. Cracked ampoules of wetting solution were also found during sensitivity and blank tests when sampler-detectors were conditioned at -33 °F (-25 °C) prior to functioning.

3.5.2.5 Interference Tests.

The results of the blank tests conducted on the aged sampler-detectors in the presence of the interferences are shown in Table A-11. Burning brush, HC smoke, and pesticide vapors interfered with some of the Bendix sampler-detectors, causing false positive responses. The aged CCC sampler detector contained higher levels of enzyme than the Bendix sampler-detectors (see Table A-6), which accounted for the better results with the CCC items. The worst results were found in the presence of pesticide (Sevin); this was expected to some degree because Sevin is used as a simulant for the nerve agent test.

3.5.3 Conclusions from PVT I.

- The nerve agent testing portion of the M256E1 has a 5-year shelf life that can be simulated by aging the sampler-detector for 24 hours at 194 °F (90 °C).
- The M256E1 sampler-detector as manufactured by Bendix and CCC using either the Worthington or Sigma eel enzyme adequately provides positive responses to VX and GB at concentrations of 0.005 mg/cu m when the enzyme disc contains up to 1.8 units of eel enzyme.
- The M256E1 sampler-detectors will give false positive responses when operated in the absence of agent at temperatures at 33 °F when the enzyme disc contains less than 1.6 units of eel enzyme. However, if they are exposed at temperatures below 33 °F and warmed to temperatures above 50 °F, they will respond properly.

- The M256E1 sampler-detector will give false positive responses when operated in the presence of burning brush, HC smoke, and pesticide (Sevin) vapors when the eel enzyme disc contains less than 1.6 units of eel enzyme.

- The M256E1 sampler-detector will function properly in the presence of exhaust fumes, fuel vapors, and decontaminants when the enzyme disc contains more than 0.8 units of eel enzyme.

- The wetting solution ampoule will crack when subjected to temperatures of -30 °F.

- There is no significant difference in the performance of the sampler-detector due either to using a different manufacturer of the sampler-detector or source of eel enzyme.

3.6 PIP Verification Test II (PVT II).

3.6.1 Discussion.

In order to resolve the problems found in PVT I, the following potential solutions were investigated:

- Replace the wetting solution ampoule with the buffer solution ampoule used in the standard M256 kit.

- Increase the amount of eel enzyme on the enzyme disc to eliminate false positive results from interferences and low temperatures.

The buffer solution ampoule will not crack at low temperatures as was demonstrated in the M256 development program and the limited tests performed during this test program. It remained to be proven, however, that the buffer solution would not hinder performance of the eel enzyme in the nerve agent test. In addition, the quantity of eel enzyme needed to eliminate false positive results but still maintain an increase in the nerve agent detection level had to be determined. This test was conducted in two phases. Phase I was a laboratory evaluation to determine the optimum levels of eel enzyme on fresh and aged enzyme discs. Phase II was conducted to prove that the M256E1 sampler-detector could be manufactured according to the changes established by Phase I and give satisfactory results.

3.6.2 Results of PVT II Phase I.

The enzyme disc must contain at least three units of enzyme to meet the 5-minute color development time when functioned in the absence of agent at 33 °F (Table A-12). In addition, a fresh disc must contain at least four units of enzyme so it will retain the required three units after the accelerated storage period (Table A-13). The sensitivity tests show that discs with four to five units of enzyme will detect VX at levels as low as 0.015 mg/cu m (Table A-14), but 0.005 mg/cu m of VX will not be detected. The buffer solution was used in all tests and did not affect the results.

3.6.3 Results of PVT II Phase II.

The M256E1 sampler-detectors manufactured for this test contained the buffer solution ampoule. The fresh enzyme disc contained 4.1 units of enzyme. The test results are listed in Table A-15. The fresh sampler-detectors correctly responded to 0.02 mg/cu m of VX and 0.005 mg/cu m of GB. The aged sampler-detector correctly responded to the absence of agent when exposed to the interferences that were a problem in PVT I (burning brush, HC smoke, and Sevin). However, the aged sampler-detectors demonstrated a reliability of only 58% after a 5-minute response time at 33 °F, but did meet the 92.5% reliability after an 11-minute response time. The reason for the poor results was that the aged enzyme disc contained only 1.9 units of enzyme (this was due to enzyme degradation of 53%). Since the Phase I test items demonstrated an enzyme degradation of 30% after accelerated storage, the manufacturing methods used for production of the M256E1 sampler-detectors need to be evaluated in order to reduce enzyme degradation.

3.7 PIP Verification Test III (PVT III).

3.7.1 Discussion.

PIP Verification Test III was conducted to solve any manufacturing problems. Since the eel enzyme is very sensitive to moisture, exposure to low quantities of moisture during manufacture or storage will accelerate the degradation rate of the enzyme. After evaluating the manufacturing process, two problem areas were found: the sampler-detector may be exposed to the atmosphere for up to 4 hours after the enzyme disc is added, and the desiccant strip is dried at 176 °F (80 °C) before being assembled in the sampler-detector. To determine the effect of controlling these two variables, additional sampler-detectors were manufactured for testing. The two problem areas were controlled by sealing the sampler-detector in the protective bag within 30 minutes after the enzyme disc added, and heating the desiccant strip to a minimum of 100 °C before assembling it into the sampler-detector.

3.7.2 Results of PVT III.

The test results are shown in Table A-16. The degradation of the eel enzyme was only 44%. This demonstrates an improvement of 9% over the degradation rate of 53% obtained in PVT II, Phase II. As a result, the reliability of the aged sampler-detectors increased to 78% (90% confidence levels) during the blank response test at 33 °F within 5 minutes and 90% reliability within 6 minutes. The sensitivity of the sampler-detector to 0.02 mg/cu m of VX and 0.005 mg/cu m of GB was also verified. This concluded the tests of the M256E1 Chemical Agent Detector Kit since all requirements had been demonstrated to the satisfaction of the user/developer community.

4. CONCLUSIONS AND RECOMMENDATIONS

4.1 Design and Operation.

The nerve agent test spot has a shelf life of at least 5 years. This can be simulated in an accelerated aging test by heating the sampler-detector to 194 °F (90 °C) for 24 hours.

The M256E1 will detect 0.005 mg/cu m of GB and 0.02 mg/cu m of VX when the eel enzyme disc contains up to 5.5 units of enzyme.

The M256E1 will give the correct response when operated in the presence of field interferences and under all the climatic conditions listed in the Materiel Need for the M256 kit when the eel enzyme disc contains no less than 2.6 units of enzyme. At temperatures of 50 °F or above, a response time of 3 minutes is required. At temperatures of 33 °F to 50 °F, a response time of 6 minutes is required. At temperatures of 32 °F and below, the sampler-detectors are warmed after exposure to the atmosphere and the 3-minute response time is satisfactory.

4.2 Processing.

Conditions must be controlled to minimize exposure of the nerve spot to the atmosphere during manufacture of the M256E1 kit. It is recommended that the enzyme disc be exposed to the atmosphere for no more than 30 minutes before being packaged. In addition, the desiccant strips should be dried at 212 °F (100 °C) or above prior to assembly in the sampler-detector. These two critical conditions should be included in the Technical Data Package for the M256E1 kit.

LITERATURE CITED

1. Materiel Need (Engineering Development) MN (ED) for a Chemical Agent Detector Kit, CDOG Paragraph 1239, 9 January 1973. UNCLASSIFIED Document.
2. Goodman, Alan. CSL Technical Report ARCSL-TR-81075. Development of Nerve Agent Detection Devices Using Electric Eel Acetylcholinesterase. February 1982. UNCLASSIFIED Report.
3. Technical Manuel TM3-6665-307-10. Operator's Manual Detector Kit, Chemical Agent: M256 NSN 6665-01-016-8399. 25 January 1979. UNCLASSIFIED Report.
4. Reliability Assessment of Product Improved Chemical Agent Detector Kit M256E1. Product Assurance Directorate RAM Engineering Branch Report No. QAC-R S&R 82-10. December 1982. UNCLASSIFIED Report.

Blank

APPENDIX

TABLES

Blank

Table A-1. Nerve Agent Detection Systems for the M256 and M256E1 Sampler Detectors

M256 Sampler Detector	M256E1 Sampler Detector
<p>Substrate Solution Ampoule: 0.3 ml of solution containing 0.09% 2,6 dichloroindophenyl acetate and 99.91% ligroin</p> <p>Buffer Solution Ampoule: 0.5 ml of a solution containing 0.6% tris (hydroxymethyl) aminomethane, 28.5% HCl (1N) 0.03% dioctyl sodium sulfosuccinate (aerosol OT) and 70.87% water</p> <p>Nerve Spot: 0.05 ml of a solution containing 2.5 to 5.5 units of horse serum cholinesterase, 91% gelatin and 8.9% water, impregnated on a 0.5-inch disc of filter paper (Whatman 40)</p>	<p>Substrate Solution Ampoule: 0.3 ml of 70.7% indoxyl acetate, 6% tetrahydrofuran and 93.3% ligroin</p> <p>Buffer Solution Ampoule: same as M256 buffer solution</p> <p>Nerve Spot: 0.05 ml of a solution containing 2.6 to 5.5 units of eel acetylcholinesterase, 16% POPS0 buffer, 0.4% bovine serum albumin, 0.01% Triton X-100 and 83.5% water, impregnated on a 0.5-inch disc of ion exchange cellulose grade paper (Whatman DE81)</p>

Table A-2. Simulated Environments for Sensitivity Tests

Climatic type	Operating conditions
Variable high humidity	27 °C (80 °F) 80 to 85% RH*
Basic hot	43 °C (110 °F) 20 to 30% RH
Basic cold	-25 °C (-33 °F) 30 to 32% RH
Aqueous limit	1 to 3 °C (33 TO 38 °F) 80 to 82% RH
Temperate (room ambient)	24 to 27 °C (75 to 80 °F) 22 to 26% RH

* RH - relative humidity

Table A-3. Cyclic Storage Test

Climate type	Storage conditions	Storage schedule	Storage time
Basic cold (C1)	-30 °F (-34.4 °C), RH not controlled	Weeks 1,3,5,7,9	5 weeks
Basic hot (A2)	145 °F (62.8 °C), 44% RH	Weeks 2,4,6,8	4 weeks

Table A-4. Interference Tests

Test substance	Test procedure
Burning brush	Test in the path of smoke
Exhaust fumes (test simultaneously)	Test downwind of the exhaust of two vehicles (one gasoline and one diesel) parked with their engines running
Decontaminants (test simultaneously)	Test downwind of shallow pans containing DANC solution, supertropical bleach, and DS2 solution
Fuel vapors (test simultaneously)	Test above open containers of diesel fuel, gasoline, kerosene, motor oil, and anti-freeze
HC Smoke	Test downwind of one HC smoke grenade.
Colored smoke (test simultaneously)	Test downwind of four smoke grenades (one of each color)
Pesticide (Sevin)	Test downwind of an area that has recently been treated with Sevin

Table A-5. Accept/Reject Criteria for Test Program

Sample size	Number of failures	
	Accept	Reject
33	0	2
64	1	3
98	2	3

Table A-6. PVT I Eel Enzyme Disc Assay Results

Sampler-detector configuration	Fresh discs (units/disc)	Aged discs (units/disc)	
		35 minutes*	24 hours*
Bendix/Worthington	1.3	-	0.9
Bendix/Sigma	1.3	-	0.8
CCC/Worthington	1.8	1.6	-
CCC/Sigma	1.1	1.0	-

*Storage time at 90 °C

Table A-7. PVT I Agent Sensitivity Test Results - GBa

Sampler-detector type	Variable high humidity	Climate type		Aqueous limit	Temperature (81 °F)
		Basic hot	Basic cold		
Bendix/Worthington	33/33 ^b	33/33	33/33	33/33	33/33
Bendix/Sigma	33/33	33/33	33/33	33/33	33/33
CCC/Worthington	63/64	33/33	33/33	33/33	33/33
CCC/Sigma	33/33	33/33	33/33	33/33	33/33

^aConcentration levels varied from 0.0025 to 0.006 mg/cu m
^bNo. of successful tests/total tests

Table A-8. PVT I Agent Sensitivity Test Results - VAD

Sampler-detector type	Variable high humidity	Climate type		Aqueous limit	Temperature (81 °F)
		Basic hot	Basic cold		
Bendix/Worthington	33/33 ^b	33/33	33/33	33/33	33/33
Bendix/Sigma	63/64	33/33	33/33	33/33	33/33
CCC/Worthington	33/33	33/33	33/33	33/33	33/33
CCC/Sigma	33/33	96/98	33/33	33/33	33/33

^aConcentration level varied from .0035 to .006 mg/cu m
^bNo. of successful test/total tests

Table A-9. PVI I Blank Response Test Results

Sampler-detector type	Variable high humidity	Climate		Aqueous limit	Temperature (81 °F)
		Basic hot	Basic cold		
Bendix/Worthington	50/50 ^a	50/50	50/50	0/25 ^c	50/50
Bendix/Sigma	50/50	48/49 ^b	50/50	0/25	50/50
CCC/Worthington	50/50	50/50	50/50	0/25	50/50
CCC/Sigma	50/50	50/50	50/50	0/25	50/50

^aNo. of successful tests/total test

^bOne considered no test

^cExposed and operated at 33 °F

^dExposed at 33 °F and warmed to 50 °F for color development

Table A-10. PVT I Cyclic Storage Test Results

Sampler-detector type	Operating temperature	
	+ 33 °F	+ 70 °F
Bendix/Worthington	0/21 ^a (4) ^b	23/23 (2)
Bendix/Sigma	0/22 (3)	22/23 (2)
CCC/Worthington	0/16 (9)	19/19 (6)
CCC/Sigma	0/18 (7)	3/23 (2)

^aNo. of successful tests/total tests

^bNumbers in parentheses denote number of sampler-detectors found to have broken wetting solution ampoules. These were not functioned.

Table A-11. PVT I Interference Test Results

Sampler-detector type	Burning brush	Exhaust fumes	Decontaminants	Fuel vapors	HC smoke	Colored smoke	Pesticide (Sevin)
Bendix/Worthington	31/50*	50/50	50/50	49/49	44/50	41/50	21/49
Bendix/Sigma	36/50	43/43	50/50	50/50	48/50	46/46	27/50
CCC/Worthington	49/49	50/50	49/49	49/50	43/43	49/49	49/50
CCC/Sigma	44/44	50/50	49/50	49/50	47/50	47/47	43/50
*No. of successful tests/total tests							

Table A-12. PVT II Phase I Blank Response Test Results (33 °F)

Enzyme concentration ^a units/disc	No. of successful tests ^b /total tests
2.4	0/50
3.1	50/50
3.6	50/50

^aAged enzyme disc^bFive-minute response time

Table A-13. PVT II Phase I Enzyme Assay Results

Enzyme concentration (fresh disc) units/disc	Enzyme concentration (aged disc)* units/disc
3.2	2.4
4.2	3.1
5.1	3.6

*Aged for 24 hours at 90 °C

Table A-14. PVT II Phase I Agent Sensitivity Test Results - VX

Enzyme concentration ^a units/disc	Agent concentration (mg/cu m)		
	0.008	0.01	0.015
3.2	1/8 ^b	-	38/39
4.2	-	25/30	-
5.1	-	33/40	-

^aFresh disc enzyme

^bNo. of successful tests/no. of tests

Table A-15. PVT II Phase II Test Results

Test	Result
Eel enzyme disc assay	Enzyme concentration (units/disc)
Fresh disc	Average 4.1 (low 3.0, high 5.4)
Aged disc ^a	Average 1.9 (low 1.0, high 2.7)
Blank Response at 33 °F (aged disc)*	No. of successful tests/no. of tests
5-min response time	34/50
7-min reponse time	39/50
11-min reponse time	50/50
Interference tests (aged discs)*	No. of successful tests/no. of tests
Burning brush	48/48
HC smoke	64/65
Pesticide (Sevin)	50/50
Agent sensitivity tests (fresh discs)	No. of successful tests/no. of tests
VX concentration 0.02 mg/cu m	33/33
GB concentration 0.005 mg/cu m	33/33

*Sampler-detector aged for 24 hours at 90 °C prior to testing

Table A-16. PVT III Test Results

Test	Result
Eel enzyme disc assay	Enzyme concentration (units/disc)
Fresh disc	Average 5.1 (low 4.5, high 5.5)
Aged disc	Average 2.8 (low 2.6, high 3.2)
Blank response at 33 °F (aged disc)*	No. of successful tests/no. of tests
5-min response time	44/50
6-min response time	48/50
Agent sensitivity test (fresh disc)	No. of successful tests/no. of tests
VX concentration 0.02 mg/cu m	33/33
GB concentration 0.005 mg/cu m	6/6

*Sampler-detector aged for 24 hours at 90 °C prior to testing

Distribution List 2

Names	Copies	Names	Copies
Commander		Commander	
U.S. Army Chemical Research, Development and Engineering Center		U.S. Army Missile Command	
ATTN: SMCCR-DDE	1	ATTN: AMSMI-ROC (Dr. B. Fowler)	1
SMCCR-DDD	1	Redstone Arsenal, AL 35898-5242	
SMCCR-DDP	1	Commander	
SMCCR-HV	1	U.S. Army Missile Command	
SMCCR-MSI	2	ATTN: AMSMI-RGT (Mr. M. Maddix)	1
SMCCR-MU	1	AMSMI-YDL, Bldg 4505	1
SMCCR-MUP-P	1	AMSMI-YLP (Mr. N. C. Kattos)	1
SMCCR-NB	1	Redstone Arsenal, AL 35898-5500	
SMCCR-OPC (B. Eckstein)	1	Commander	
SMCCR-OPF	1	Anniston Army Depot	
SMCCR-OPP	4	ATTN: SDSAN-CS	1
SMCCR-OPR	1	Anniston, AL 36201-5009	
SMCCR-PPC	1	Commandant	
SMCCR-PPI	1	U.S. Army Chemical School	
SMCCR-PPP	1	ATTN: ATZN-CM	
SMCCR-RSL	1	ATZN-CM-CC	1
SMCCR-RSP	1	ATZN-CM-CS (Deputy MLSO)	1
SMCCR-RSP-A (M. Miller)	1	ATZN-CM-MLB	1
SMCCR-RSP-B	1	ATZN-CM-NC	1
SMCCR-RSP-P	1	Fort McClellan, AL 36205-5020	
SMCCR-RST	1	Commander	
SMCCR-SF	1	U.S. Army Aviation Center	
SMCCR-SPS-T	2	ATTN: ATZQ-CAT-CA-M (CPT P. McCluskey)	1
SMCCR-ST	1	ATZQ-D-MS	1
SMCCR-TDT (S. Lawhorne)	1	Fort Rucker, AL 36362-5000	
SMCCR-DDA (Record copy)	1	Commander	
SMCCR-DDP (R. Eckhaus)	20	U.S. Army Electronic Proving Ground	
Aberdeen Proving Ground, MD 21010-5423		ATTN: STEEP-DT-F	1
Commandant		Fort Huachuca, AZ 85613-7110	
U.S. Army Ordnance Missile and Munitions Center and School		Commander	
ATTN: ATSK-EI (Mr. Cranford)	1	Naval Weapons Center	
Redstone Arsenal, AL 35897-6700		ATTN: Code 3893 (Dr. L. A. Mathews)	1
Commander		China Lake, CA 93555	
U.S. Army Missile Command		Commander	
Redstone Scientific Information Center		U.S. Army Science and Technology Center	
ATTN: AMSMI-RD-CS-R/ILL Documents	2	Far East Office	
Redstone Arsenal, AL 35898-5241		ATTN: Medical/Chemical Officer	2
		APO San Francisco 96328-5000	

Commander
U.S. Army Armament, Munitions and Chemical
Command

ATTN: AMSMC-ASN 1
AMSMC-IMP-L 1
AMSMC-IRA 1
AMSMC-IRD-T 1
AMSMC-SFS 1
Rock Island, IL 61299-6000

Director
U.S. Army Materiel Command Field Safety
Activity

ATTN: AMXOS-C (Mr. L. Morgan) 1
AMXOS-SE (Mr. W. P. Yutmeyer) 1
Charlestown, IN 47111-9669

Commander
Naval Weapons Support Center

ATTN: Code 5063 (R. Farren) 1
Code 5063 (Dr. J. R. Kennedy) 1
Crane, IN 47522-5050

Commander
U.S. Army TRADOC Independent Evaluation
Directorate

ATTN: ATZL-TIE-C (Mr. C. Annett) 1
Fort Leavenworth, KS 66027-5130

Commander
U.S. Army Combined Arms Center Development
Activity

ATTN: ATZL-CAM-M 1
Fort Leavenworth, KS 66027-5300

Commander
U.S. Army Armor School
ATTN: ATZK-DPT (NBC School) 1
Fort Knox, KY 40121-5211

Commander
U.S. Army Natick Research, Development and
Engineering Center

ATTN: STRNC-AC 1
Natick, MA 01760-5015

Commander
U.S. Army Natick Research, Development and
Engineering Center

ATTN: STRNC-UE 1
STRNC-UMP 1
STRNC-US 1
Kansas Street
Natick, MA 01760-5017

Commander
U.S. Army Natick Research, Development and
Engineering Center

ATTN: STRNC-W 1
STRNC-WS 1
STRNC-WTS 1
STRNC-WTT 1
Kansas Street
Natick, MA 01760-5018

Commander
U.S. Army Natick Research, Development and
Engineering Center

ATTN: STRNC-IC 1
STRNC-ICA 1
STRNC-ICAA 1
STRNC-ICC 1
STRNC-ICCC (Mr. Tassinari) 1
STRNC-IP 1
STRNC-ITF (Dr. R. Roth) 1
STRNC-ITP (Mr. R. Liable) 1
Kansas Street
Natick, MA 01760-5019

Commander
U.S. Army Natick Research, Development and
Engineering Center

ATTN: STRNC-YBF 1
STRNC-YBH 1
STRNC-YE 1
STRNC-YEB 1
STRNC-YEP 1
STRNC-YM 1
STRNC-YMM 1
STRNC-YS (Dr. M. L. Herz) 1
STRNC-YSC (Dr. D. H. Robertson) 1

Kansas Street
Natick, MA 01760-5020

Commander
U.S. Army Materials Technology Laboratory
ATTN: SLCMT-OP (Dr. N. Schneider) 1
Watertown, MA 02172-0001

HQ AFSC/SDTS 1
Andrews AFB, MD 20334-5000

HQ AFSC/SGB 1
Andrews AFB, MD 20334-5000

Commanding Officer
Naval Explosive Ordnance Disposal
Technology Center
ATTN: Code BC-2 1
Indian Head, MD 20640-5070

Commander
U.S. Army Technical Detachment
Naval Explosive Ordnance Disposal
Technology Center
ATTN: AMSMC-EDT
Indian Head, MD 20640-5096

Commander
Detachment S
USAOG, Team III
Fort Meade, MD 20755-5985

Commander
Harry Diamond Laboratories
ATTN: DELHD-RT-CB (Dr. Sztankay)
2800 Powder Mill Road
Adelphi, MD 20783-1197

Director
U.S. Army Concepts Analysis Agency
ATTN: CSCA-RQL (Dr. Helmbold)
8120 Woodmont Avenue
Bethesda, MD 20814-2797

Director
U.S. Army Human Engineering Laboratory
ATTN: AMXHE-IS (Mr. Harrah)
Aberdeen Proving Ground, MD 21005-5001

Project Manager
Smoke/Obscurants
ATTN: AMCPM-SMK-E (A. Van de Wal)
AMCPM-SMK-T
Aberdeen Proving Ground, MD 21005-5001

Commander
U.S. Army Test and Evaluation Command
ATTN: AMSTE-TE-F
AMSTE-TE-T
Aberdeen Proving Ground, MD 21005-5055

Director
U.S. Army Ballistic Research Laboratory
ATTN: AMXBR-OD-ST (Tech Reports)
Aberdeen Proving Ground, MD 21005-5066

Director
U.S. Army Materiel Systems Analysis
Activity
ATTN: AMXSY-CR (Mrs. F. Liu)
AMXSY-GC (Mr. F. Campbell)
AMXSY-MP (Mr. H. Cohen)
Aberdeen Proving Ground, MD 21005-5071

Commander
U.S. Army Toxic and Hazardous Materials
Agency
ATTN: AMXTH-ES
AMXTH-TE
Aberdeen Proving Ground, MD 21010-5401

1 Commander
U.S. Army Environmental Hygiene Agency
ATTN: HSHB-O/Editorial Office
Aberdeen Proving Ground, MD 21010-5422

1 Commander
U.S. Army Armament, Munitions and Chemical
Command
ATTN: AMSMC-HO (A) (Mr. J. K. Smart)
AMSMC-QAC (A)
AMSMC-QAE (A)
Aberdeen Proving Ground, MD 21010-5423

1 Commander
U.S. Army Technical Escort Unit
ATTN: SMCTE-AD
Aberdeen Proving Ground, MD 21010-5423

1 Commander
U.S. Army Medical Research Institute of
Chemical Defense
ATTN: SGRD-UV-L
Aberdeen Proving Ground, MD 21010-5425

1 Director
1 Armed Forces Medical Intelligence Center
ATTN: AFMIC-IS
Building 1607
Fort Detrick, Frederick, MD 21701-5004

1 Commander
1 U.S. Army Medical Bioengineering Research
and Development Laboratory
ATTN: SGRB-UBG (Mr. Eaton)
SGRB-UBG-AL, Bldg 568
Fort Detrick, Frederick, MD 21701-5010

1 Commander
HQ 1/163d ACR, MT ARNG
ATTN: NBC (SFC W. G. Payne)
PO Box 1336
Billings, MT 59103-1336

Director
U.S. Army Research Office
ATTN: AMXRO-CB (Dr. R. Ghirardelli)
AMXRO-GS
PO Box 12211
Research Triangle Park, NC 27709-2211

Commander
U.S. Army Cold Regions Research and
Engineering Laboratory
ATTN: CRREL-RG
Hanover, NH 03755-1290

Commander
U.S. Army Armament Research, Development
and Engineering Center
ATTN: SMCAR-CCL-E
SMCAR-CCT
SMCAR-FSF-B
SMCAR-LCE-C (Dr. H. Matsugama)
SMCAR-LCE-P (Dr. S. Morrow)
SMCAR-MS1
SMCAR-SCA-C (Mr. R. A. Trifiletti)
SMCAR-SCM (Bldg 335)
Picatinny Arsenal, NJ 07806-5000

Project Manager
Cannon Artillery Weapons Systems
ATTN: AMCPM-CAWS-A
Picatinny Arsenal, NJ 07806-5000

Director
Los Alamos National Laboratory
ATTN: T-DOT, MS P371 (S. Gerstl)
Los Alamos, NM 87545

Commander/Director
U.S. Army Atmospheric Sciences Laboratory
ATTN: SLCAS-AE (Dr. F. Niles)
SLCAS-AE-E (Dr. D. Snider)
SLCAS-AR (Dr. E. H. Holt)
SLCAS-AR-A (Dr. M. Heaps)
SLCAS-AR-P (Dr. C. Bruce)
SLCAS-AR-M (Dr. R. Sutherland)
White Sands Missile Range, NM 88002-5501

Director
U.S. Army TRADOC Analysis Command
ATTN: ATRC-WDB (L. Dominguez)
ATRC-WSL
White Sands Missile Range, NM 88002-5502

Commander
U.S. Army Scientific and Technical
Information Team, Europe
ATTN: AMXMI-E-CO
Box 48
APO New York 09079-4734

Commander
Headquarters, 3d Ordnance Battalion
ATTN: AEUSA-UH
APO New York 09189-2737

Commander
U.S. Military Academy
Department of Physics
ATTN: MAJ Decker
West Point, NY 10996-1790

AFWAL/FIEEC
Wright-Patterson AFB, OH 45433-6503

HQ ASD/AESD
Wright-Patterson AFB, OH 45433-6503

AAMRL/HET
Wright-Patterson AFB, OH 45433-6503

FTD/TQTR
Wright-Patterson AFB, OH 45433-6508

AFWAL/FIES/SURVIAC
Wright-Patterson AFB, OH 45433-6553

AAMRL/TID
Wright-Patterson AFB, OH 45433-6573

Commandant
U.S. Army Field Artillery School
ATTN: ATSF-GA
Fort Sill, OK 73503-5600

Commander
Naval Air Development Center
ATTN: Code 60332 (D. Herbert)
Warminster, PA 18974-5000

Commandant
U.S. Army Academy of Health Sciences
ATTN: HSHA-CDH (Dr. R. H. Mosebar)
HSHA-CDS (CPT Eng)
HSHA-IPM
Fort Sam Houston, TX 78234-6100

HQ HSD/RDS Brooks AFB, TX 78235-5000	1	Administrator Defense Technical Information Center ATTN: FDAC	2
HQ HSD/RDTK Brooks AFB, TX 78235-5000	1	Cameron Station, Building 5 Alexandria, VA 22304-6145	
HQ USAFSAM/VNC Brooks AFB, TX 78235-5000	1	Commander U.S. Army Materiel Command ATTN: AMCCN AMCSF-C	1 1
Commander U.S. Army Dugway Proving Ground ATTN: STEDP-SD (Dr. L. Salomon) Dugway, UT 84022-5010	1	5001 Eisenhower Avenue Alexandria, VA 22333-0001	
Commander U.S. Army Dugway Proving Ground ATTN: STEDP-SD-TA-F (Technical Library) Dugway, UT 84022-6630	1	Commander Naval Surface Weapons Center ATTN: Code E4311 Code G51 (Brumfield) Dahlgren, VA 22448	1 1
Director U.S. Army Communications-Electronics Command Night Vision and Electro-Optics Directorate ATTN: AMSEL-NV-D (Dr. R. Buser) AMSEL-NV-V (Luanne Obert) Fort Belvoir, VA 22060-5677	1 1	Commander U.S. Army Foreign Science and Technology Center ATTN: AIAST-CW2 220 Seventh Street, NE Charlottesville, VA 22901-5396	1
Commander Marine Corps Development and Education Command ATTN: Code D091, SPWT Section Quantico, VA 22134-5080	1	Director Aviation Applied Technology Directorate ATTN: SAVRT-ATL-ASV Fort Eustis, VA 23604-5577	1
Commander U.S. Army Nuclear and Chemical Agency ATTN: MONA-CM 7500 Backlick Road, Bldg 2073 Springfield, VA 22150-3198	1	Commander U.S. Army Training and Doctrine Command ATTN: ATCD-N Fort Monroe, VA 23651-5000	1
Chief of Naval Research ATTN: Code 441 800 N. Quincy Street Arlington, VA 22217	1	HQ TAC/DRPS Langley AFB, VA 23665-5001 Commander U.S. Army Logistics Center ATTN: ATCL-MGF Fort Lee, VA 23801-6000	1 1



DEPARTMENT OF THE ARMY
US ARMY RESEARCH, DEVELOPMENT AND ENGINEERING COMMAND
EDGEWOOD CHEMICAL BIOLOGICAL CENTER
5183 BLACKHAWK ROAD
ABERDEEN PROVING GROUND, MD 21010-5424

REPLY TO
ATTENTION OF

RDCB-DPS-RS

MEMORANDUM THRU Director, Edgewood Chemical Biological Center, (RDCB-D/Mr. Joseph Wienand), 5183 Blackhawk Road, Aberdeen Proving Ground, Maryland 21010-5424

JC
14 OCT 14

FOR Defense Technical Information Center, 8725 John J. Kingman Road, Ft Belvoir, VA 22060

SUBJECT: Internal Request for Change in Distribution

1. This action is in response to an Edgewood Chemical Biological Center (ECBC) Internal Request for a Change in Distribution on documents related to chemical detectors.
2. The listed documents in the attachment have been reviewed by ECBC Subject Matter Experts and deemed suitable for the change in distribution to read "Approved for Public Release; distribution unlimited."
3. The point of contact is Adana Eilo, ECBC Security Specialist, (410) 436-2063 or adana.l.eilo.civ@mail.mil.

Encl

NANCY CARTER
Acting Security and Surety Manager

Chemical Detector References

- [1] Katzoff, Lionel and Razulis, Marie, Technical Report March 1981 – September 1983, CRDEC-TR-86041, "Engineering Development of the Simulator, Detector Tickets, Chemical Agent: Training M256 (TRAINS), June 1986, UNCLASSIFIED, Distribution B, U.S. Gov't Agencies Only.

- [2] Eckhaus, Robert, Technical Report May 1981-June 1984, CRDEC-TR-87054, "Product Improvement Program to Increase the Nerve Agent Sensitivity of the M256 Chemical Agent Detector Kit," June 1987, UNCLASSIFIED, Distribution B, U.S. Gov't Agencies Only.

- [3] Ramachandran, C.K., Technical Report February 1988, DPG/TA-88/07, "Reliability of M256 Chemical Agent Detector Kit at Extreme Environmental Temperatures," February 1988, UNCLASSIFIED, Distribution B, U.S. Gov't Agencies Only.

- [4] Schwartz, Laura W., Packard, Michael T., Holmes, Celestine T., and McDowell, Charles J., Technical Report April-November 1971, ED-TR-74018, "Evaluation of M15/M18 Enzyme Detector Ticket System with Concentrations of GB, June 1974, UNCLASSIFIED, Distribution C, U.S. Gov't Agencies/Contractors.